

 
PLASTIC SWITCH
L18538 9.37 L18540 12.22



LIGHT SWITCHES
E10125 5.38 E10225 6.05 E10325 8.20
S/STEEL
E10115 5.80 E10215 5.38 E10315 7.16
WHITE



OBLONG SWITCH
E18520 BR 24.82
E18521 CH 22.13

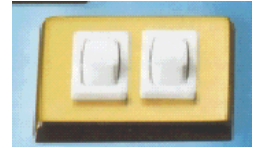

TWIN
E10180 27.10

E



E05003 CHR PULL 6.72
E05202 RED BUTTON 9.60



E18503 CH



E10610 IVORY SWITCH 8.65



Round Double Switch



Square Double Switch



Round Single Switch



Single Square Switch

ROUND CAST BRASS SWITCH SQUARE
E20458 SING 7.99 E20461 SING 12.65
E20459 DBL 10.99 E20462 DBL 16.33
CHROME TO ORDER



 
WARNING LIGHT
E874 RED 2.00
E875 GREEN 2.00
E876 AMBER 3.95



ROCKER SWITCH
E878 BLACK 2.86
E879 AMBER 2.86
E880 GREEN 2.86
E881 RED 2.86



TOGGLE SWITCH
E888 BLACK 2.86
E889 AMBER 2.86
E890 GREEN 2.86
E891 RED 2.86

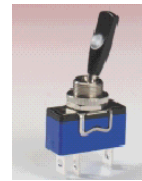

HEAVY DUTY TOGGLE
E3319 7.45



OVAL CAST BRASS
E20457 7.99



E3320 3.35
PRESS SWITCH



DURITE TOGGLE
E64500 7.51



CURTISY SWITCH
E3304 5.20



 
WATERPROOF
E3326 4.33



TOGGLE SWITCH
E892 ON OFF 7.45
E893 ON OFF ON 7.45



HOLD ON
E892A 9.95
E894 ON-ON 8.40

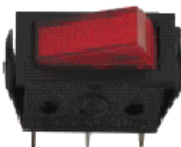

FLUSH FITTING
ROCKER SWITCH
E883 BLACK 2.86
E884 AMBER 2.86
E885 GREEN 2.86
E886 RED 2.86



HEAVY DUTY
PUSH PULL SWITCH
E890 2.86
E3305 3.92



WATERPROOF
TOGGLE COVER
E895 4.90



HORN BUTTON
E3301 5.25



HORN BUTTON
E3300 5.05



HORN BUTTON
E3302 7.32