



**PLASTIC SWITCH**  
**SINGLE DOUBLE**  
 L18538 5.04 L18540 6.90

**LIGHT SWITCHES BRASS**  
**SINGLE DOUBLE TREBLE**  
 E10125 5.60 E10225 6.83 E10325 8.56  
**LIGHT SWITCH S/STEEL**  
 E10115 4.75 E10215 5.99 E10315 7.10

**OBLONG BRASS SWITCH**  
**SINGLE TWIN**  
 E18520 BR 24.82 E10180 27.10  
 E18521 CH 22.13




**WHITE PLASTIC**  
**E**

**IVORY SWITCH**  
 E10610 8.80

**ROUND CAST BR CH**  
 E20458 SING 8.97 13.25  
 E20459 DBL 11.99 16.18

**SQUARE BR CH**  
 E20461 SING 8.97 13.25  
 E20462 DBL 11.99 16.33

**OVAL CAST**  
 E20457 BR 8.07  
 E20456 CH 13.25

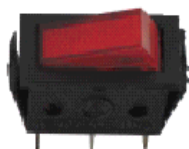

**FLUSH FITTING**  
**ROCKER SWITCH**  
 E883 BLACK 3.25  
 E884 AMBER 3.25  
 E886 RED 3.25  
 E885 GREEN 3.25

**ROCKER SWITCH**  
 E878 BLACK 3.25  
 E879 AMBER 3.25  
 E880 GREEN 3.25  
 E881 RED 3.25

**TOGGLE SWITCH**  
 E888 BLACK 3.25  
 E889 AMBER 3.25  
 E890 GREEN 3.25  
 E891 RED 3.25

**HEAVY DUTY**  
**TOGGLE**  
 E3319 7.82

**HEAVY DUTY**  
**PUSH PULL SWITCH**  
 E890 3.25  
 E3305 5.08



**CURTISY**  
**SWITCH**  
 E3304 5.49

**WATERPROOF**  
**TOGGLE SWITCH**  
 E33274 5.95

**TOGGLE SWITCH**  
 E892 ON OFF 8.25  
 E893 ON OFF ON 8.25

**PP HOLD ON**  
 E892A 11.00  
 E894 ON-ON 9.30

**DURITE TOGGLE**  
 E64500 7.51

**WATERPROOF**  
**TOGGLE COVER**  
 E895 5.45



**HORN BUTTON**  
 E3301 5.95

**HORN BUTTON**  
 E3300 5.95

**HORN BUTTON**  
 E3302 7.64

**PRESS SWITCH W4**  
 E37514 2.40

**PULLSWITCH**  
 E05003 10.80



E828219

E828230

E828283

E827301

E827302