

**PLASTIC SWITCH**  
**SINGLE** **DOUBLE**  
**L18538 5.72** **L18540 7.87**



**LIGHT SWITCHES BRASS**  
**SINGLE** **DOUBLE** **TREBLE**  
**E10125 5.99** **E10225 6.83** **E10325 8.56**  
**LIGHT SWITCH S/STEEL**  
**E10115 4.75** **E10215 5.99** **E10315 7.10**



**OBLONG BRASS SWITCH**  
**SINGLE** **TWIN**  
**E18520 BR 24.82** **E10180 27.10**  
**E18521 CH 22.13**



**WHITE PLASTIC**  
**E**




**ROUND CAST BR CH**  
**E20458 SING 8.97 13.25**  
**E20459 DBL 11.99 16.18**



**SQUARE BR CH**  
**E20461 SING 8.97 13.25**  
**E20462 DBL 11.99 16.33**



**OVAL CAST BR CH**  
**E20457 BR 7.99**  
**E20456 CH 13.25**

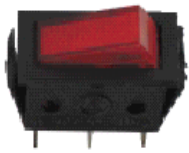

**FLUSH FITTING**  
**ROCKER SWITCH**  
**E883 BLACK 3.50**  
**E884 AMBER 3.50**  
**E886 RED 3.50**  
**E885 GREEN 3.50**



**ROCKER SWITCH**  
**E878 BLACK 3.50**  
**E879 AMBER 3.50**  
**E880 GREEN 3.50**  
**E881 RED 3.50**



**TOGGLE SWITCH**  
**E888 BLACK 3.50**  
**E889 AMBER 3.50**  
**E890 GREEN 3.50**  
**E891 RED 3.50**



**HEAVY DUTY**  
**TOGGLE**  
**E3319 7.82**



**HEAVY DUTY**  
**PUSH PULL SWITCH**  
**E890 3.50**  
**E3305 5.57**



**CURTISY**  
**SWITCH**  
**E3304 5.49**



**WATERPROOF**  
**E33274 5.95**



**TOGGLE SWITCH**  
**E892 ON OFF 8.80**  
**E893 ON OFF ON 8.25**



**PP HOLD ON**  
**E892A 11.70**  
**E894 ON-ON 9.90**



**DURITE TOGGLE**  
**E64500 7.51**



**WATERPROOF**  
**TOGGLE COVER**  
**E895 5.86**



**HORN BUTTON**  
**E3301 5.95**



**HORN BUTTON**  
**E3300 5.95**



**HORN BUTTON**  
**E3302 7.64**



**PRESS SWITCH W4**  
**E37514 2.40**



**PULLSWITCH**  
**E05003 10.80**



**E828219**



**E828230**



**E828283**



**E827301**



**E827302**