



2 PIN PLUG CLIPSAL
E37589 W4 BEIGE 3.86



2 PIN SOCKET CLIPSAL
E



3 PIN 2AMP PLUG
E110201 BEIGE 5.76



WHITE RD 3 PIN PLUG
E6053 3 AMP 7.50
E6052 5 AMP 8.99



JACK PLUG W4
E059300 PLUG
E37597S SOCKET



W4 2 PIN PLUG
E138535 3.36



W4 PIN SURFACE SOCKET
E138536 2.50



W4 2 PIN & SOCKET
E138537 4.56



W4 TV POINTSOCKET
E



BACKING BOX
E038664 4.59



BRASS ROUND
3 PIN SOCKET
E3245 2 AMP 19.50
E0323 5 AMP 31.50



WHITE ROUND
3 PIN SOCKET
E2171 3 AMP 16.62
E2172 5 AMP 18.90



BRUSHED S/S RND
3 PIN SOCKET
E243 3 AMP
E 5 AMP



CHROME ROUND
3 PIN SOCKET
E32406 3 AMP
E055 5 AMP



BEIGE SOCKET
3 ROUND PIN
E110204 2 AMP 11.72
E110205 5 AMP 16.80



ADAPT IT 1 2PIN
E059755 6.12



ADAPT IT 2
E059760 8.16



ADAPT IT 3
E059770 8.16



CIGAR PLUG & CROCC
E059795 ADAPT IT 4 7.99



ADAPT IT 5
E011650 8.35



PLUG & SOCKET CHROME
WATERPROOF
E2302 2/3 AMP 2 PIN 17.48
E2303 2/3 AMP 3 PIN 20.18
E2304 2/3 AMP 4 PIN 22.37



PLUG & SOCKET
BLACK CAP
E2305 5/7 AMP 2 PIN 24.77
E2306 5/7 AMP 3 PIN 27.20
E2307 5/7 AMP 4 PIN 29.60



PLUG ONLY CHROME
E2322 2/3 AMP 2 PIN 7.99
E2323 2/3 AMP 3 PIN 8.99
E2324 2/3 AMP 4 PIN 10.25
E2325 5/7 AMP 2 PIN 10.71
E2326 5/7 AMP 3 PIN 12.35
E2327 5/7 AMP 4 PIN 13.99



SOCKET ONLY PLASTIC CAP
E2332 2/3 AMP 2 PIN 8.99
E2333 2/3 AMP 3 PIN 9.99
E2334 2/3 AMP 4 PIN 9.98
E2335 5/7 AMP 2 PIN 12.30
E2336 5/7 AMP 3 PIN 13.25
E2337 5/7 AMP 4 PIN 14.99