




RUBBER GUYS
 M932 EACH 1.66
 M933 x 4 75mm 6.65
 M934 x 2 150mm 6.65

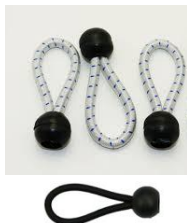

CANOPY LOOPS
 M352 75mm 1.50
 M354 100mm 1.60
 M355 150mm 1.70
BLACK
 M353 100mm 1.60
 M356 150mm 1.70



HIPKISS EYELET KITS
 M020 6.75mm 11.95
 M022 7.94mm 11.95
 M024 9.53mm 13.45
 M026 11.11mm 16.35



BRASS EYELETS & WASHER KIT AF
 M668430 6.7mm 11.63
 M668431 8.0mm 11.66
 M668432 9.5mm 13.67
 M668433 17.63
 M668434 12.7mm 19.46



BRASS EYELETS
 M020R 6.75mm 4.40
 M022R 8.0 mm 4.40
 M024R 9.5 mm 4.40
 M026R 11.1mm 6.65



M008 S/S HOOKS x 2
 3.25



LIFT DOT STUD WOOD FIXING
 M035 PP 3.25



LIFT DOT STUD EX LONG PK 2
 M034X 8.26



LIFT DOT STUD NUT & BOLT
 M040 PK 2 3.25



LIFT DOT STUD PLATE FIXING
 M034 PK 2 5.45



LIFT DOT STUD EX HIGH PK2
 M034X 8.26



LIFT DOT EYE MATERIAL PK 2
 M036 3.25



TURN BUTTON MATERIAL PK 2
 M052 3.25



TURN BUTTON WOOD PK 2
 M054 3.25



EX HIGH TURN BUTTON TO WOOD PK 2
 M 055 5.45



TURN BUTTON WOOD FIXING
 M053 3.25



LIFT DOT CLOTH STUD PK 2
 M032 3.25



TURN BUTTON EYE CLOTH
 M056 3.25



PRESS STUDS CLOTH TO CLOTH
 M100 KIT 29.99
 M100R SPARE 6.65



PRESS STUD KIT S/STEEL PK 10 FABRIC TO WOOD
 M668420 12.18



PRESS STUD KIT S/STEEL PK 10 FABRIC TO FABRIC
 M668421 12.18



W4 PRESS STUDS NICKEL PLATED
 M37652 1/2" 4.72
 M37659 3/8 3.99



TURNBUTTON FASTNER FABRIC TO FABRIC KIT NICKEL PLATED X 5
 M668402 9.83



TURNBUTTON FASTNER FABRIC TO METAL KIT NICKEL PLATED X 5
 M668400 6MM 11.18
 M668403 8MM 9.62
 M668404 10MM 16.52



FABRIC TO FABRIC NICKEL PLATED X 5
 M668410 10.28



FABRIC TO METAL NICKEL PLATED X 5
 M668411 STD 13.91
 M668412 DOUBLE 19.62

TURN BUTTON KIT
 M668401_6mm 8.52



LIFT THE DOT FASTNER KIT WITH M5 STUD NICKLE
 M668413 STD 13.04
 M668414 DBL HIGHT 15.96



LIFT THE DOT FASTNER KIT WITH WOOD SCREWS
 M668415 STD 17.89
 M668416 HIGH 15.14



STARBRITE SNAP KIT
 M088601 32.50



PLASTIC FABRIC EYELETS
 M150 WHITE 4.40
 M152 BLUE 4.40



EYELET PUNCH
 M37678 3.50